



**ISOframe**  
*wave*

With hidden link

## Wave modules

Total system heights

**Midi** 229 cm / 90.2"

Starter kit


Extension kit

### Starter kit complete with:

2 post sets, 2 feet, 1 Flexi-Wave Link,  
2 sets corner trim, 1 set kicker and hanger

### Extension kit complete with:

1 post set, 1 foot, 1 Flexi-Wave Link,  
1 set kicker and hanger

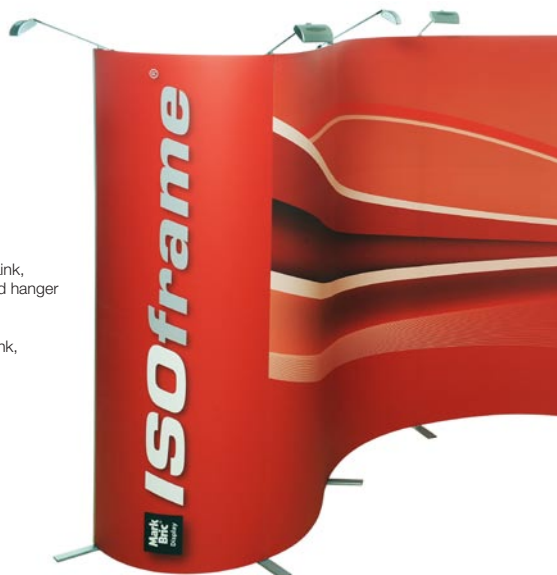

## Accessories

### Padded case on wheels

Holds up to a **6 section** Wave system.  
Item IS-TC-01-MB



### Small graphic tube

to be attached to frame case  
Holds up to **6 panels**,  
Item IS-0850-RTS-S-MB



### Large graphic tube

with handle and shoulder strap.  
Holds up to **9 panels**,  
Item IS-0850-RTB-S-MB


## Mounting instructions





**ISOframe**  
*wave*

## Graphic production and corner trim

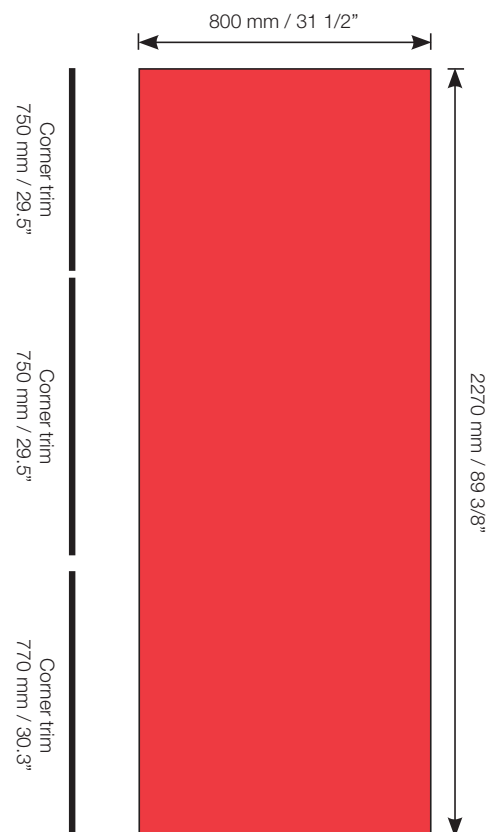

## Graphic panel attachments

### Accessories

#### Kickers & Hangers

(incl. for the first set of panels)  
800 mm / 31 1/5"

#### Magnetic tape (not incl.)

12 mm/0.5" A tape, 30 m / 98 ft.

Each panel needs:  
Midi 6,2 m / 21 ft.

#### Printer material

We recommended the following material:

**Poster paper:** 180 gr / 0.4 lb.

The printed graphic panels must be laminated before use.

Front side: 125 microns (0,125 mm) / 0.005" deep crystal"

Reverse side: 250 microns (0,250 mm) / 0.010" stop light"

**Polyester film:** 330-370 microns (0,350 mm) / 0.013-0.015"

Top laminate: 125 microns (0,125 mm) / 0.005" "deep crystal"



Kicker



Hanger

#### Mounting of Kickers and Hangers

Kickers and hangers to be fixed at the bottom and at the top of the graphic panels (reverse side).

#### Mounting of Magnetic Tape


Magnetic tape to be fixed **horizontally** directly over/under kicker/hanger strip. Magnetic tape to be fixed **vertically** along each side of the graphic panels.

**IMPORTANT** Carefully mount the magnetic tape slightly inset from the edge of the graphic panel by approximately 0,25 mm / 0.010". Once mounted, a very thin straight white line should show between the edge of the graphic and the outside edge of the magnetic tape. Do not exceed 0,5 mm / 0.020".

#### Application Techniques

To obtain optimum adhesion, the bonding surfaces must be well unified, clean and dry. Typical surface cleaning solvents are isopropyl alcohol/water mixture (rubbing alcohol) or heptane.

Note: Be sure to follow solvent manufacturer's precautions and directions for use when using solvents.

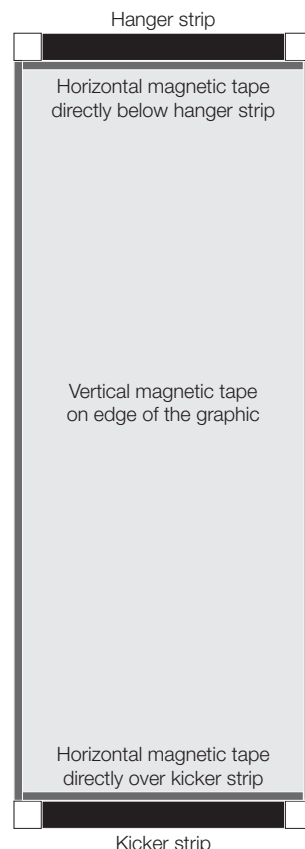

For more information please contact  
**Silverline Australia**  
on 1300 491 883  
or visit [www.silverlineaust.com.au](http://www.silverlineaust.com.au)

*Display your  
full potential*